



Veto Mini V-1000 Slow Juicer
Instruction Manual

www.vetojuicers.com

Introduction

Thank you for purchasing this Veto Mini V-1000 slow juicer!

This product has been designed and manufactured to give you years of trouble free service.

Please take time to read these instructions prior to use - they have been written to ensure you get the very best from your purchase.

As with any new electrical product please allow several hours of use before all components have acclimatised themselves with your surroundings and settled into optimum operation.

Technical Specifications

Model Number :	Veto Mini V-1000
Input Voltage :	220-240 V 50/60 Hz
Output Power :	120W
Instruction Manual :	1.0

Contents

Safety Instructions.....	5
First Time Use.....	7
Your Veto Slow Juicer.....	8
How To Assemble.....	9
How To Operate.....	10
Tips For Juicing	11
Cleaning and Storage.....	13
Plug Safety.....	14
Troubleshooting.....	16
Guarantee.....	18

Safety Instructions

Please read the instruction manual carefully before using the device. Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.

When using electrical appliances basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Only use the appliance as described in this manual to avoid harm, fire or electric shock. Do not use the appliance for any purpose other than that for which it is designed.

If the supply cord is damaged, a qualified engineer must replace it in order to avoid a hazard. This appliance is double insulated for your protection. Do not attempt to repair a double insulated appliance or attempt to repair this appliance yourself. Ensure that the supply cord is kept away from heat or sharp edges that could cause damage. Do not use extension cords.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision and instruction in the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance. Make sure the cable is not hanging in a downwards position and the appliance is stored in a place it is not harmful for children.

Never immerse the unit, power cord or plug in water or any other types of liquid. The appliance must be unplugged from the power supply after use and during any maintenance or setting up, such as cleaning or changing spare parts. Do not use with wet hands or use in damp situations.

Veto Mini

Do not use outdoors. Do not use directly below a socket outlet. This appliance is not intended to be operated by means of an external timer or separate remote-control system. Never use this device unsupervised. This appliance is designed exclusively for private, domestic use and is not suitable for commercial or industrial use. Only use the appliance on a stable, level, heat-resistant surface.

Use only attachments recommended or sold by Veto Juicers, others may result in fire, electric shock or injury.

Always store the appliance in a dry environment. Always keep this appliance clean at all times. This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Always inspect your appliance before use. Check parts are correctly attached. Avoid contact with moving parts. Do not use this appliance if it has been dropped, left outdoors or dropped in water.

Do not put your fingers or other objects into the juicer while it is in operation. If food becomes lodged in the opening, use the food pusher to move it through safely. If that doesn't work, use another piece of fruit or vegetable to move it through. When neither is possible, unplug the juicer and disassemble to remove stuck food.

Keep hands and utensils away from the auger (B) while processing food to reduce the risk of severe injury or damage to the juicer. A scraper may be used, but only when the juicer is off and the plug is disconnected.

First Time Use

Carefully unpack all parts of the juicer including those in the packaging. Remove all labels from appliance prior to use. Give the juice bowl a slight twist anti-clockwise and lift.

Before first use, carefully wipe the exterior of the appliance to remove any dust that may have accumulated and dry with a dry cloth. Do not use harsh or abrasive cleaning agents. Wash the accessories in warm soapy water and dry. Do not immerse the supply cord or motor part of this appliance in water or any other liquids.

This appliance has a built-in safety lock; this feature ensures that you can only switch on the appliance if you have assembled the juicer correctly on the motor unit. When assembled correctly, the built-in safety lock will be unlocked.

Before assembling the Veto juicer, ensure the power cord is unplugged.

Veto Mini

Your Veto Slow Juicer

1. Pusher
2. Hopper
3. Strainer
4. Strainer Holder
5. Handle
6. Pulp Spout
7. Anti Drip Juice Spout
8. On / Off / Reverse Switch
9. Motor Unit



How To Assemble



A

1. Place the juice bowl (E) on the motor unit and give a slight clockwise twist to lock.



B

2. Put the strainer holder (D) into the juice bowl (E).


3. Put the strainer (C) into the strainer holder (D) with the arrow aligned with the pulp spout.



C


4. Put the juice auger (B) into the strainer (C).

5. Fit the hopper (A) on to the juice bowl so the dots are aligned and twist clockwise into position so it locks into the main body.

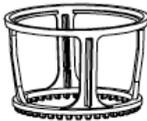

D

6. Place the pulp tank beneath the pulp spout on the left hand side of the juicer's main body.

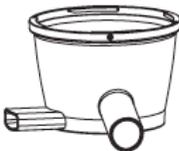

E

7. Place the juice jug under the juice spout (7).

8. Slide the food pusher (1) down the food chute.

IMPORTANT: For safety reasons the juicer will not operate if the juice bowl and hopper are not correctly assembled.

Veto Mini

How To Operate

Your Veto Mini V-1000 slow juicer is suitable for most common fruits and vegetables such as carrots, apples, tomatoes, celery, spinach, cucumbers and so on. Unlike traditional juicers, your Veto slow juicer uses a slow grinding process which is designed to improve the quality and yield of the vegetable and fruit juice.

Always wash fruit and vegetables thoroughly before juicing.

Always remove large stones or hard seeds from fruit/vegetables prior to juicing. Remove any hard inedible skins such as melon, pineapple and mango skin before juicing.

If pieces of fruit or vegetables are very large, chop them to a size that will fit down the juicer's food chute. **Smaller pieces of fruit will always produce a better quality of juice.**

Ensure the dots are in position on top of the juicer lid. Turn the control switch (8) to 'ON' to start the juicing mechanism.

Feed the fruit and vegetables into the juicer slowly. You should only need the pusher when juicing leafy greens. **Do not force the food pusher rapidly as this may harm the juicer and will produce lesser quality juice.**

With the juice spout tap open, juice from the fruit and/or vegetables will flow directly into the juice jug and the pulp will be collected in the pulp jug.

When juicing is complete, ensure that the juicer's control switch is set to the 'OFF' position. After you've finished juicing, go into reverse mode for 2-3 seconds to help disassembling and cleaning. When the power is turned off at the outlet and the juicer is unplugged, you are safe to disassemble.

Disassemble your juicer in the following order:

- i. Remove the pusher (1).
- ii. Remove the hopper (A).
- iii. Remove the auger (B).
- iv. Remove the strainer (C) and strainer holder (D).
- v. Remove the juice bowl (E).

CAUTION:

Never put your hand or any other object in the food chute during operation.

Tips For Juicing

Always make sure the rubber stopper on the underside of the juice bowl is plugged in. This regulates the pressure of the waste spout and prevents it clogging. Only open the rubber stopper when cleaning.

Chop ingredients into small pieces for optimal extraction.

Never use ice or frozen fruit with your juicer.

Soak raw nuts (not roasted) for 12-24 hours prior to juicing. Dry nuts will make nut butters, add some water to make milk.

If the pulp spout is clogging with waste it is important to be mindful of the speed you are adding the ingredients. Clean it and continue at a slower pace.

Stringy fibrous ingredients like celery or wheatgrass should be chopped down to 1-2" clumps and balled up or folded up, to prevent the stringy fibres tangling inside. With such ingredients and leafy greens it's useful to alternate adding the ingredients with harder ingredients, when combined you'll get a smoother operation and a higher yield.

Veto Mini

Your juicer can handle most varieties of fruit and vegetables. If using fruit with hard, inedible skin (i.e. watermelons, pineapple, mangoes etc.) always remove the skin before placing in the juicer. For better tasting citrus juice, also remove the inner white peel. Fruits with stones or hard seeds (i.e. mangoes, nectarines, apricots, and cherries) should be pitted before juicing. A small amount of lemon can be added to apple juice to prevent the juice browning. Bananas can be difficult to juice, we recommend mashing them seperately and stirring in.

The juicer is not suitable for juicing very hard and starchy fruits or vegetables such as sugar cane. When juicing fruit and vegetables of different consistencies it may help to juice different combinations, i.e. juice soft fruit first, (i.e. oranges) then follow with hard fruit (i.e. apples). This will help you achieve maximum juice extraction. If juicing herbs or leafy greens, wrap them together to form a bundle before placing in the juicer or combine them with other ingredients.

Why not head over to

www.vetojuicers.com

for recipes ideas?


Cleaning and Storage

We recommend you clean the juicer after each use. Regular maintenance of your appliance will keep it safe and in proper operational order.

When not in use or before cleaning, always disconnect the appliance from the mains supply.

Wash removable parts in warm, soapy water then rinse and dry all parts. Regularly clean the outside of the appliance with a soft damp cloth and dry with a dry towel.

Use the supplied brush (F) to help clean the strainer (C).

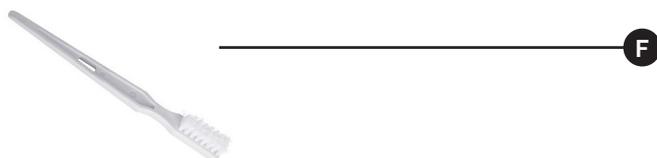

CAUTION: Do not use harsh solvents, alkaline cleaning agents, abrasive cleansers or scouring agents of any kind when cleaning.

Always check that the appliance is in good working order and that all removable parts are secure. Check the power supply cord and plug regularly for cuts or damage.

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.


Caution: Do not immerse the motor unit in water or any other liquid.

Plug Safety

The appliance is fitted with a 5 amp plug. In the event of having to change the fuse in the plug supplied, a 5 amp ASTA approved (BS 1363) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code:

- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the Earth symbol or coloured green and yellow. Under no circumstances should either the Neutral or Live be connected to the earth terminal
- The wire coloured blue or black must be connected to the terminal "N". Under no circumstances should either the Earth or Live be connected to the Neutral terminal.
- The wire coloured brown or red must be connected to the terminal marked "L". Under no circumstances should either the Earth or Neutral be connected to the Live terminal.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

If in doubt please contact a qualified engineer for advice.

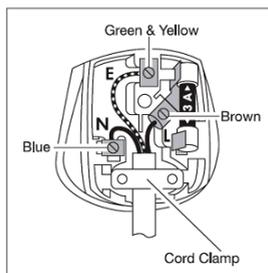


Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ATSTA approved one (conforming to BS1362) of the same rating. If in doubt, consult a qualified electrician.

If you need to remove the plug – DISCONNECT IT FROM THE MAINS and then cut off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet, as there is a danger of an electric shock.

Correct Disposal of this Product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

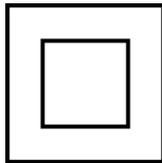

Troubleshooting

Problem	Reason	Solution
The appliance suddenly stops	A. The power plug is not properly inserted B. The quantity of fruit / vegetables put into the juicer are too large C. Hard fruit / vegetables are not cut into small enough pieces	A. Insert the plug into the socket. B. Press "reverse" for 2-3 seconds to make fruits / vegetables return upwards; then press "forward" (repeat the process about 3 times). If the machine still does not run, clean the machine and start juicing again. C. Hard fruits / vegetables (such as carrots) should be squeezed after being cut into strips.
The juice amount is small or juice flows out of the main body	A. Fruit / vegetables are too cold for optimal squeezing B. The rubber pad at the bottom of the bowl is not installed properly	A. The juice amount will increase if fruit / vegetables are squeezed after being immersed in lukewarm water. B. Ensure the rubber pad is securely tucked into the juicing bowl.

<p>There is abnormal noise</p>	<p>A. Accessories are not property installed</p> <p>B. The appliance is put on an uneven surface</p> <p>C. Hard fruit / vegetables cause sound during squeezing</p>	<p>A. Stop the appliance and check whether the accessories are property installed.</p> <p>B. Put the juicer on an even surface.</p> <p>C. Certain friction noise can be heard when carrots or apples are used for squeezing. It has no impact on the process.</p>
<p>The container and accessories are discoloured after use</p>	<p>The container and accessories are likely to be discoloured when fruits / vegetables with pigment (such as carrots, spinach, etc.) are used for squeezing.</p>	<p>Clean the juicer soon after use. It may hep to wipe the appliance with some edible oil and clean it with a non abrasive detergent.</p> <p>Discolouring will never have an impact on your juicers performance.</p>

Guarantee

This guarantee is applicable for goods bought directly from Veto Juicers. If you purchased your juicer from another vendor please contact them.

If by chance you are unhappy with your purchase, please contact us within seven days of delivery for a refund. Returned items must be in unused condition with all supplied Veto Juicers accessories and packaging. You are responsible for the condition of your goods until they reach us, so pack your items carefully to prevent damage in transit. Worn, damaged or incomplete returns will not be eligible for a refund and will be returned to you.

All our goods are supplied with a 12 month warranty from the date of purchase, covering defects in materials and workmanship under conditions of normal use and maintenance. If your goods develop a fault within this period, we will repair or replace the item. If we cannot do this we will refund your actual purchase price.

If goods become defective within three months of delivery, we will pay for collection of the items and delivery of the replacement. After this time, we will not pay to collect items.

In the unlikely event that your goods arrive damaged, please inform us within 24 hours of delivery, including photos of the damage. The claim will be assessed, and if approved we will arrange for the goods to be collected and we will replace or refund as necessary.

It is your responsibility to securely package items for their safe return to us using a trackable service. Not doing so will void your warranty.

To arrange the return of your item please contact us by email at **info@vetojuicers.com**.

This guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the instructions contained in these operating instructions.
- This guarantee does not cover accidental damage or misuse.
- This guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacturers disclaim any liability for incidental or consequential damages.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.



Veto Juicers, part of Fridja LTD.
82 Lower Clapton Road,
London, E5 0RN, United Kingdom.

www.vetojuicers.com

